7. Positioning the Tripping Cam

1. Once the registration is correct, loosen the Tripping cam and slide it into alignment with the Numbering head's Operating arm. Make sure the Tripping cam glides smoothly over the Roller of the Operating arm without interfering with the movement of the arm itself and tighten in place.

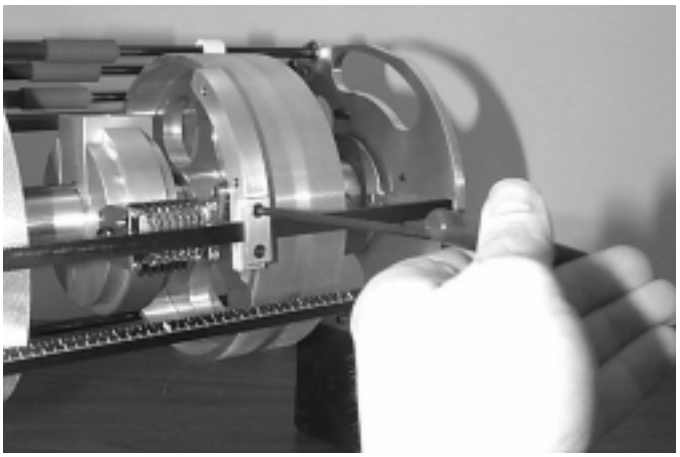

NOTE: To test the Tripping cam's position, you will need to manually release the NC Latch mechanism to allow free rotation of the cylinder.

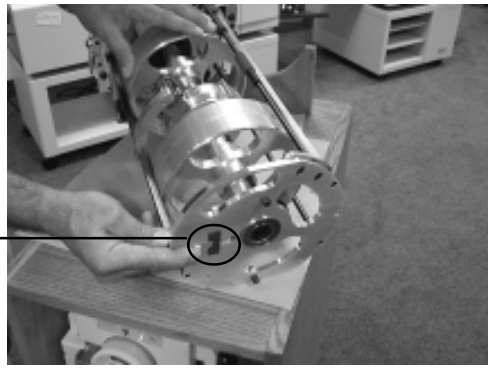

2. Align the white dot on the Indicator knob with the Arrow on the cylinder plate to lock the drum back in the proper position.

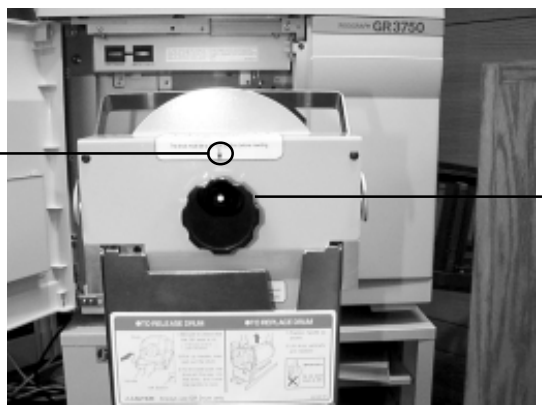

3. To set the Numbering head to the correct beginning number, rotate the digits on the head with the supplied pick. Now you are ready to print.

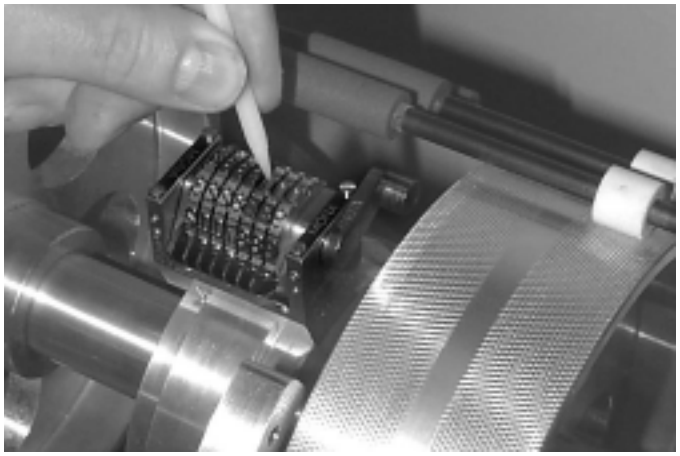

4. Slide the NC numbering system back into the Risograph and place the preprinted job on the Risograph feed table.

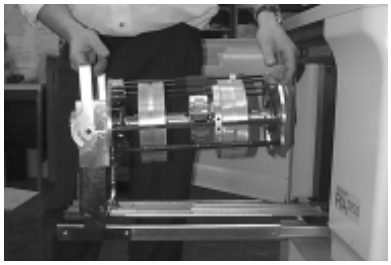

5. Make sure the Risograph is in the **PRINT** position (**not in** master making mode), enter the desired number of prints, and press **Start**. The Risograph, with the integrated numbering system, will automatically complete the job.